Several Steps To Wash Laundry be gentle! in Beko washing machine with front loading

plug the washing machine in

put in the detergent


- pods into the drum

- powder and washing gel into the detergent dispenser

compartments of the  $\ \ \ \ \ \ \$  prewash detergent dispenser & softener

(drawer): wash

- do not exceed the max quantity mark

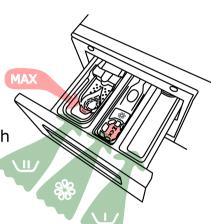

- wash clothes inside out choose a suitable washing program

closed

 programs differ in washing time (usually 1-2h), should be placed temperature, activation of prewash, spinning speed and special functions next to the washing

opened

(a) by turning the handle to parallel position to the

pipe or (b) by turning the tap counter-clockwise

put the laundry

and fabric type, empty all pockets

- leave at least space of one third of the

sort your laundry according to color shades

volume of the drum, maximum capacity (kg)

in the drum

is indicated in the program table

turn around

 $\longrightarrow$  if it doesn't go easily, the tap is

probably already open

avoids color fading and protects print

900 only

open the water tap

- follow the **laundry care labels** on the clothes

- for an option overview see the **programme chart** 

and press the start button DIII

- more information can be found in our **detailed guide** 

## close the doors of the washing machine

- ensure that no items are caught in the loading door
- push the loading door to close until you hear a locking sound

when the washing program is finished → be gentle!

make sure the washing machine door is unlocked

- door is locked during the washing program, after the program ends it takes **few minutes** to unlock

- should you try to open the door before, you may damage it!

- (un)locked door is signalled by a **light indicator** 

locked

Ready wait for the indicator to be on continually



gotten stuck in the drum or in the rubber seal

close the water tap you help preventing flood from a leak or burst inlet hose

open the drum and take the

laundry out of the machine

make sure that smaller pieces of clothes have not

 
turn off the machine and pull the plug out of the mains

leave the drum door open

otherwise the air cannot circulate through the washing machine and it will stink!

## having trouble? need help?

see our detailed guide



- see instructions for the washing machine

- ask for help in our Facebook group

🕜 Koleje 17. listopadu

www.facebook.com/groups/koleje <

- contact the reception of building A

