Several Steps To Wash Laundry be gentle!

closed

in Whirlpool washing machine with front loading

plug the washing machine in and turn it on ()


put in the detergent

- pods into the drum

- powder and washing gel into the detergent dispenser

compartments of the $\ \ \ \ \ \$ prewash detergent dispenser 🛞 softener (drawer): www main wash

- do not exceed the max quantity mark

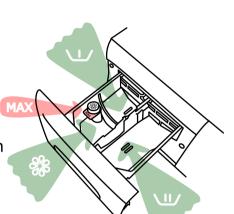

(a) by turning the handle to parallel position to the pipe or (b) by turning the tap counter-clockwise

opened

 \longrightarrow if it doesn't go easily, the tap is probably already open

turn around

put the laundry in the drum

900 only

open the water tap

- sort your laundry according to color shades and fabric type, empty all pockets
- leave at least space of one third of the volume of the drum, maximum capacity (kg) is indicated in the program table
- wash clothes inside out

avoids color fading and protects print

close the doors of the washing machine

- ensure that no items are caught in the loading door
- push the loading door to close until you hear a locking sound

choose a suitable washing program and press the start button DIII

- programs differ in washing time (usually 1-2h), should be placed temperature, activation of prewash, spinning speed and special functions next to the washing
- follow the **laundry care labels** on the clothes
- for an option overview see the **programme chart**
- more information can be found in our **detailed guide**

when the washing program is finished

make sure the washing machine door is unlocked

- door is locked during the washing program, after the program ends it takes **few minutes** to unlock
- should you try to open the door before, you may damage it!
- (un)locked door is signalled by a **light indicator**



wait for the lock symbol on display to turn of



→ be gentle! open the drum and take the laundry out of the machine

make sure that smaller pieces of clothes have not gotten stuck in the drum or in the rubber seal

close the water tap you help preventing flood from a leak or burst inlet hose

 
turn off the machine and pull the plug out of the mains

leave the drum door open

otherwise the air cannot circulate through the washing machine and it will stink!

having trouble? need help?

see our detailed guide



- see instructions for the washing machine
- ask for help in our Facebook group

🕜 Koleje 17. listopadu

www.facebook.com/groups/koleje <

