

Several Steps To Wash Laundry

in Whirlpool washing machine with top loading

1

plug the washing machine in

3


put in the detergent

- pods into the drum
- powder and washing gel into the detergent dispenser

compartments of the detergent dispenser:

- prewash
- softener
- main wash

- do not exceed the **max quantity mark** !

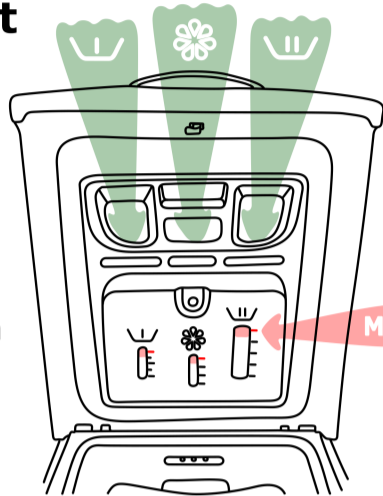

2

open the water tap

(a) by turning the handle to parallel position to the pipe or (b) by turning the tap counter-clockwise

if it doesn't go easily, the tap is probably already open

4

put the laundry in the drum

- sort your laundry according to color shades and fabric type, **empty all pockets**
- leave at least space of one third of the volume of the drum, maximum capacity (kg) is indicated in the program table
- wash clothes inside out *avoids color fading and protects print*

6


choose a suitable washing program and press the start button

- programs differ in washing time (usually 1-2h), temperature, activation of prewash, spinning speed and special functions *should be placed next to the washing machine*
- follow the **laundry care labels** on the clothes
- for an option overview see the **programme chart**
- more information can be found in our **detailed guide**

5

close the drum properly !

otherwise the laundry and the washing machine may get damaged!

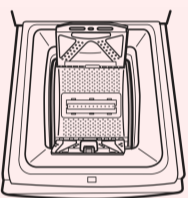

first close the metal door of the drum so that the flaps are properly hooked
then you can close the lid



when the washing program is finished

7

make sure the washing machine door is unlocked !

- door is locked during the washing program, after the program ends it takes **few minutes** to unlock
- should you try to open the door before, you may damage it!
- (un)locked door is signalled by a **light indicator**



wait for the light indicator to turn on



8

open the drum and take the laundry out of the machine

make sure that smaller pieces of clothes have not gotten stuck in the drum or in the rubber seal

9

close the water tap

you help preventing flood from a leak or burst inlet hose

10

turn off the machine and pull the plug out of the mains

11

leave the drum door open !

otherwise the air cannot circulate through the washing machine and it will stink!



all reference documents are available at <https://listopad.koleje.cuni.cz/pracky>

having trouble? need help?

- see our detailed guide *should be placed next to the washing machine*
- see instructions for the washing machine
- ask for help in our Facebook group *Koleje 17. listopadu*
www.facebook.com/groups/koleje
- contact the reception of building A