

Loading the laundry



1. Open the machine lid by pulling it upwards.
2. Open the drum by pushing the drum flap release (pictures "1a" or "1b" - depending on the model; models as shown on "1a" have a fixed drum flap release which will not compress when pushed).
3. Place the items of laundry into the drum one by one. Do not exceed the maximum load of the programmes indicated in the separate programme chart.

Notes:

- Overloading the machine will result in unsatisfactory washing results and creased laundry.
 - Take care that the laundry does not overhang the drum; if this is the case, push the laundry down into the drum so that there is enough free space to close the drum flaps properly.
 - Do not use the flaps to push the laundry into the drum.
4. To close the drum, hold both doors in the middle again (picture "2").


ATTENTION: make sure that the drum flaps are properly locked - depending on the model:

- the metal hook must be completely hooked into the rear door flap - see picture "2a", or
- all metal hooks must be properly hooked inside the rear door flap, and the button must overlap the edge of the rear door flap - see picture "2b".
- check that no laundry gets stuck between the flaps, or between flaps and drum.

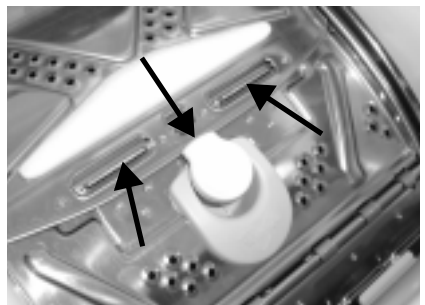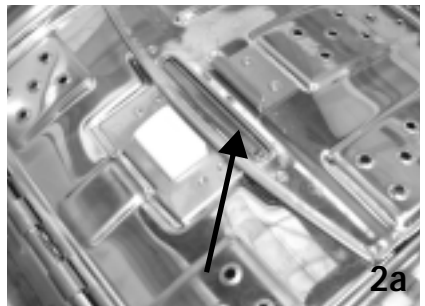

PROGRAMME CHART

- A. Programme selector
- B. "Start delay" button
- C. Programme sequence indicator (over the line)
Start delay indicator (under the line)
- D. "Variable spin" button
- E. "Start/Pause" button
- F. "Reset" button
- G. "Lid open" indication

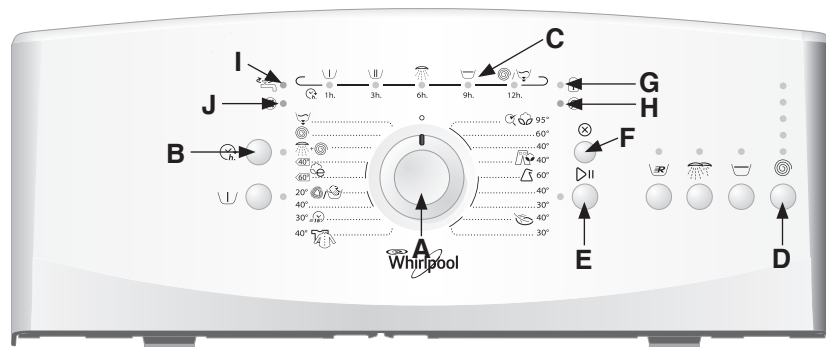

This washing machine is equipped with automatic safety functions which detect and diagnose faults at an early stage and react appropriately:

- H. "Service" indication
- I. "Water tap closed" indication
- J. "Clean pump" indication


Acoustic noise level :
 Washing - 59 dB(A) / 1 pW
 Spinning - 1000 rpm, 76 dB(A) / 1 pW
 800 rpm, 72 dB(A) / 1 pW

Programme	Care Labels	Max. Load kg	Type of wash / Notes <i>- for temperature selection, respect the manufacturer's recommendations on the care label</i>	Detergents and Additives			Special options					Max. Spin Speed rpm	
				Pre-wash	Main Wash	Softener	Start delay	Pre-wash	Rapid	Intensive rinse	Rinse hold		Spin
Cotton/Antibacterial 40 - 60 - 95°C			Normally to heavily soiled bed linen, table linen, towels and garments made of cotton and/or linen. <i>Selecting "Cotton 95", this programme eliminates bacteria, ensuring sanitization of your laundry. The bacteria removal efficiency has been tested following a similar methodology to the NF EN 13697 standard of Nov. 2001.</i>	*	Yes	*	*	*	*	*	*	*	max.
Jeans 40°C			Normally soiled cotton jeanswear and garments made of jeanslike material such as trousers and jackets.	*	Yes	*	*	*	-	*	*	*	max.
Synthetics 30 - 40 - 60°C			Normally soiled blouses, shirts, overalls etc. made of polyester (Diolen, Trevira), polyamide (Perlon, Nylon).	*	Yes	*	*	*	*	*	*	*	max.
Delicates 30 - 40°C			Curtains and delicate clothing, dresses, skirts, shirts and blouses.	*	Yes	*	*	*	-	-	*	*	max.
Daily load 40°C			Lightly to normally soiled textiles made of cotton and/or synthetics.	-	Yes	*	*	-	-	*	*	*	max.
Quick wash 15' 30°C			Briefly worn clothing made of cotton, artificial fibers and blends with cotton. <i>Refresh programme. Use lowest recommended detergent amount.</i>	-	Yes	*	*	-	-	-	*	*	max.
Wool/Handwash cold - 40°C			Woolens, labelled with the Woolmark and identified as machine washable, as well as textiles made of silk (keep to care label!), linen, wool and viscose marked as handwashable	-	Yes	*	*	-	-	-	*	*	max.
eCotton 40 - 60°C			Normally soiled cotton laundry. <i>At 40°C and 60°C standard cotton programme and most favourable programme in terms of combined water and energy consumption for washing cotton laundry. - Reference programme for the Energy Label.</i>	-	Yes	*	*	-	-	*	*	*	max.
Rinse & Spin		-	<i>Rinse and intensive spin programme. Same as the last rinse and the final spin in the "Cotton" programme.</i>	-	-	*	*	-	-	*	*	*	max.
Spin		-	<i>In this programme spinning is intensive. Same as the spin cycle in the "Cotton" programme.</i>	-	-	-	*	-	-	-	-	*	max.
Drain		-	<i>Drain only - no spinning. Alternative method of terminating programme after "Rinse hold".</i>	-	-	-	*	-	-	-	-	-	-

Yes = dosing required / * = optional

CONSUMPTION DATA

Power consumption in off-mode 0.11 W / in left-on mode 0.11 W

Programme	Temperature (°C)	Load (kg)	Water (l)	Energy without "Rapid" (kWh)	Approx. Programme Duration ☺ (hrs : min)		 %
					without "Rapid"	with "Rapid"	
Cotton/Antibacterial	95	5.0	50*	1.70	2:25	1:55	64
Cotton	60	5.0	47	0.95	2:20	1:45	
Cotton	40	5.0	47	0.64	2:05	1:30	
Jeans	40	4.0	41	0.58	1:44	-	
Synthetics	60	3.0	50*	0.90	2:05	1:14	47
Synthetics	40	3.0	40	0.50	1:50	0:59	
Delicate	40	1.5	50	0.55	0:45	-	
Delicate	30	1.5	50	0.50	0:41	-	
Daily load	40	3.0	40	0.45	1:00	-	68
Speed 15'	30	3.0	30	0.15	0:15	-	
Wool/Handwash	40	1.0	40	0.55	0:35	-	62
Wool/Handwash	cold	1.0	40	0.40	0:30	-	
eCotton** ☐	60	5.0	42	0.75	2:45	-	62
eCotton** ☐	60	2.5	27	0.67	2:30	-	
eCotton** ☐	40	2.5	27	0.54	2:15	-	

Consumption values were measured in normalized conditions in compliance with standard IEC/EN 60 456. Consumption data in the home may vary with respect to the values in the table in relation to the water supply pressure and temperature, the load and the type of wash. Water and energy consumption refer to the default setting of the programmes; selecting special options or modifying spin speed or temperature will change the consumption data.

☺ The programme duration may differ from the values indicated above as it depends on the operation conditions applicable at that time (see also "Troubleshooting Guide" in your Instructions for Use).

 Approximate remaining moisture content (%). After programme end and spinning with maximum selectable spin speed, in default programme setting.

* To reduce the water temperature, some cold water is added at the end of the main wash cycle, before the pump drains the water out.

** Reference Programmes for Energy Label. For reasons of energy saving, the real water temperature may deviate from the declared cycle temperature.

PREPARATION OF THE WASH CYCLE

1. Load the machine, close the drum doors and check that they are properly locked.
2. Add detergent and eventual additives as described on the front page and in your Instructions for use.
3. Close the lid.
4. Turn the **programme selector** to the desired programme and temperature. The indication next to the **"Start/Pause"** button blinks. The indication lamp of the predefined spin speed lights up.

If you do not start the programme soon after having made your choice, the washing machine will switch off automatically after about a quarter of an hour. Switch on the washing machine again by turning the programme selector back to „Off/O“ and then to the desired programme.

SELECT ANY DESIRED OPTION

When the combination of programme and additional option(s) is not possible, the indication lights switch off automatically. Unsuitable combinations of options are deselected automatically.



Full manual, including troubleshooting, available here:

https://listopad.koleje.cuni.cz/dokumenty/manuals/Whirlpool_AWE_50510_en.pdf

"Prewash" button

- Only for heavily soiled loads (for example sand, granular dirt) sensible. Increases the cycle time by approximately 15 min.
- Do not use liquid detergent for the main wash when activating the Prewash option.

"Rapid" button

- Enables quicker washing by shortening the programme duration.
- Recommendable for small loads or only lightly soiled laundry.

"Intensive rinse" button

- More water is added and rinse cycle is prolonged.
- This option is particularly suitable for areas with very soft water, washing baby linen and helping people with allergies.

"Rinse Hold" button

- The laundry remains in the last rinse water without progressing to the final spin cycle to avoid creasing and prevent colours from changing.
- This option is particularly recommended for the "Synthetics", "Daily load" and "Delicates" programmes.
- It is useful if you want to postpone spinning to a later time, or if you want to drain out only.
- If you select "Rinse Hold", do not leave items to soak for too long.

- As soon as the appliance stops in the rinse hold, the "Rinse hold" lamp of the sequence indicator lights up and the lamp next to the **"Start/Pause"** button flashes.

Terminate the "Rinse Hold" option:

- Press the **"Start/Pause"** button; the programme will terminate automatically with the final spin cycle for the present wash programme.
- If you do not wish to spin the clothes, turn the programme selector knob to the "Drain" programme and press the **"Start/Pause"** button.

"Spin" button

- Every programme has a predefined spin speed.
- Press the button to set another spin speed.
- If spin speed "0" is selected, the final spinning is cancelled but intermediate spin peaks remain during the rinse. The water is drained out only.

START DELAY

The "Start delay" allows to run the machine at the consumer's convenience, for example at night when electricity is cheaper.

- Do not use liquid detergent when activating this function.
- Select programme, spin speed and options.
- Press the "Start Delay" button several times to select a delay time of 1, 3, 6, 9 or 12 hours. The corresponding indicator lamp lights up.
- Start the programme (see "Programme Start"). The indication next to the "Start delay" button lights up and goes off when the programme starts.
- Once having pressed the **"Start/Pause"** button, the countdown of the time delay begins. When the programme starts, the start delay indicator light goes off and is replaced by the programme sequence indication.
- After the **"Start/Pause"** button has been pressed, the number of hours preselected can be changed by pressing again the "Start delay" button.

To cancel the "Start delay"

..before you press the "Start/Pause" button:

- Turn the programme selector to another position or press the **"Reset"** button.

..after having pressed the "Start/Pause" button:

- Press the **"Reset"** button for at least 3 second. The start delay indicator light goes off.

PROGRAMME START

Open the tap and press the **"Start/Pause"** button. The blinking light next to the **"Start/Pause"** button becomes constant. The programme sequence

indicator shows the current programme phase, running from left to right through Wash, Rinse, Spin/Drain. When the programme phase is finished, the corresponding indication goes out.

"LID OPEN" INDICATION

Before starting and after end of a programme, the lamp lights to show the the lid can be opened. As long as a wash programme is running, the lid remains locked and must on no account be forced open. In case you have an urgent need to open it during a running programme, refer to "Cancel a running programme before the end".

FAILURE INDICATIONS

In case of any failures or irregularities, consult the "Troubleshooting Guide" in your Instructions for Use.

"Water tap closed" - 

No or not sufficient inlet water.

"Service" - 

Failure or malfunction of an electrical component.

"Clean pump" - 

Waste water is not pumped out.

PROGRAMME END

- The "Lid open" indication lights up. After about a quarter of an hour, the washing machine will switch off completely to save energy.
 1. Turn the programme selector to the "Off/O" position.
 2. Close the water tap.
 3. Open lid and drum and unload the machine.
 4. Leave the lid open for some time to allow the interior of the machine to dry.

CHANGE PROGRAMME AND/OR OPTIONS AFTER PROGRAMME START

1. Press the **"Start/Pause"** button to pause the programme. The light blinks.
2. Select the new programme, temperature, any options and another spin speed if you want.
3. Press the **"Start/Pause"** button again. The new programme continues at the same position where the previous programme was interrupted. Do not add detergent for this programme.

CANCEL A RUNNING PROGRAMME BEFORE THE END

The **"Reset"** button cancels a programme before the end.

- Press the **"Reset"** button for at least 3 seconds. The water is drained out; it may last a while until you can open the lid.