

Loading the laundry



1. Open the machine lid by pulling it upwards.
2. Open the drum by pushing the drum flap release (pictures "1a" or "1b" - depending on the model; models as shown on "1a" have a fixed drum flap release which will not compress when pushed).
3. Place the items of laundry into the drum one by one. Do not exceed the maximum load of the programmes indicated in the separate programme chart.

Notes:

- Overloading the machine will result in unsatisfactory washing results and creased laundry.
 - Take care that the laundry does not overhang the drum; if this is the case, push the laundry down into the drum so that there is enough free space to close the drum flaps properly.
 - Do not use the flaps to push the laundry into the drum.
4. To close the drum, hold both doors in the middle again (picture "2").

ATTENTION: make sure that the drum flaps are properly locked - depending on the model:

- the metal hook must be completely hooked into the rear door flap - see picture "2a", or
- all metal hooks must be properly hooked inside the rear door flap, and the button must overlap the edge of the rear door flap - see picture "2b".
- check that no laundry gets stuck between the flaps, or between flaps and drum.

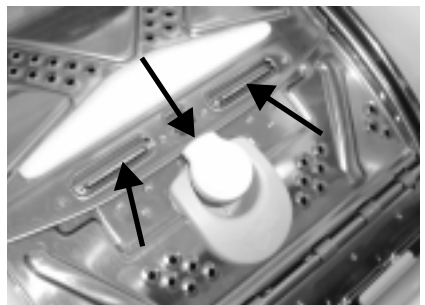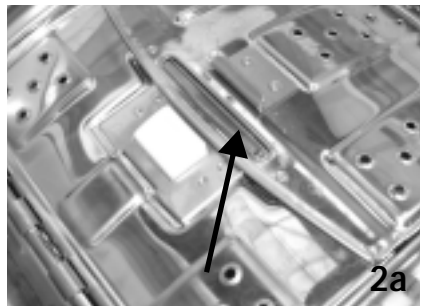

CONSUMPTION DATA

Power consumption in off-mode 0.11 W / in left-on mode 0.11 W

Programme	Temperature (°C)	Load (kg)	Water (l)	Energy (kWh) without "Rapid"	Approx. Programme Duration (hrs : min)		Approx. remaining moisture content (%)***	
					without "Rapid"	with "Rapid"	1000 rpm	1200 rpm
Mixed	40	3.0	45	0.43	1:00	–	64	60
Cotton	95	6.5	55*	1.90	2:35	2:00	65	55
Cotton	60	6.5	51	1.10	2:30	1:45		
Cotton	40	6.5	64	0.98	2:45	1:30	40	36
Synthetics	60	3.0	54*	0.89	2:15	0:59		
Synthetics	40	3.0	50	0.56	2:15	0:59		
Delicates	40	1.5	50	0.55	0:45	–		
Wool	40	1.0	40	0.55	0:35	–		
Rapid 30'	30	3.0	42	0.25	0:30	–		
Aqua Eco	40	2.5	19	0.43	1:00	–		
Colours	40	4.0	67	0.50	1:20	1:00		
Jeans	40	4.0	41	0.58	1:30	1:10		
Sport	30	3.0	50	0.45	2:05	1:14		
Business	40	1.5	50	0.55	0:45	–		
eCotton** ◀	60	6.5	48	0.67	4:00	–	62	44
eCotton** ◀	60	3.25	34	0.57	2:30	–		
eCotton** ◀	40	3.25	34	0.46	2:30	–		

Consumption values were measured in normalized conditions in compliance with standard IEC/EN 60 456. Consumption data in the home may vary with respect to the values in the table in relation to the water supply pressure and temperature, the load and the type of wash. Water and energy consumption refer to the default setting of the programmes; selecting special options or modifying spin speed or temperature will change the consumption data.

☺ The programme duration may differ from the values indicated above as it depends on the operation conditions applicable at that time (see also "Troubleshooting Guide" in your Instructions for Use).

* To reduce the water temperature, some cold water is added at the end of the main wash cycle, before the pump drains the water out.

** Standard Cotton programme and basis for Energy Label. For reasons of energy saving, the real water temperature may deviate from the declared cycle temperature.

*** After programme and spinning with maximum selectable spin speed, in default programme setting.

PREPARATION OF THE WASH CYCLE

1. Load the washing machine, close the drum door and check that it is closed properly.
2. Pour in the detergent and any additives, as described overleaf and in the instruction manual.
3. Close the lid.
4. Turn the **programme selector** to the desired programme. The display shows the duration of the selected programme (in hours and minutes), and the indicator for the **"Start/Pause"** button flashes. The temperature and spin speed can be changed by pressing the "Temperature" and "Spin" buttons. If you do not start the programme soon after having made your choice, the washing machine will switch off automatically after about a quarter of an hour. Switch on the washing machine again by turning the programme selector back to "O" and then to the desired programme.

SELECT ANY DESIRED OPTION

When the combination of programme and additional option(s) is not possible, the indication lights switch off automatically. Unsuitable combinations of options are deselected automatically.

"Colours 15°" button

- Saves energy used for water heating while maintaining a good wash result.
- Supports colour maintenance when washing coloured laundry.

- Recommendable for lightly soiled laundry without stains.
- Make sure that your detergent is suitable for cold wash temperatures.
- Not selectable for Cotton 70 - 95°C.

"Fresh care" button

- Select this option if you cannot unload the laundry soon after programme end, or if you tend to forget the laundry in your washing machine. It will help to keep your laundry fresh.
- The washing machine will start to tumble the laundry periodically after programme end.
- The light of the "Fresh care" button will blink while this function is active, and the display will show an animation.
- The periodic tumbling will last up to approximately 6 hours after the end of your wash programme, and you can stop it at any time by pressing the "Fresh care" button. It will last a while until you can open the door.
- After the "Fresh care" period has run out, the display indicates "End".

"Rapid" button

- Enables quicker washing by shortening the programme duration.
- Recommendable for small loads or only lightly soiled laundry.

"Prewash" button

- Only for heavily soiled loads (for example sand, granular dirt). Increases the cycle time by approximately 15 min.
- Do not use liquid detergent for the main wash when activating the Prewash option.

"Intensive rinse" button

- More water is added and rinse cycle is prolonged.
- This option is particularly suitable for areas with very soft water, washing baby linen and helping people with allergies.

"Spin" button

- Every programme has a predefined spin speed.
- Press the button to set another spin speed.
- If spin speed "0" is selected, the final spinning is cancelled but intermediate spin peaks remain during the rinse. The water is drained out only.

START DELAY

The "Start delay" button allows the user to run the machine at his convenience, for example at night when electricity is cheaper.

- Select programme, spin speed and options.
- Press the "Start delay" button several times to select a delay time by 1 to 24 hours.
- Start the countdown of the "Start delay" by pressing **"Start/Pause"**. the lamp over the "Start delay" button blinks, and it goes off when the programme starts.
- Once having pressed the **"Start/Pause"** button, the countdown of the time delay begins. The time delay indication on the display disappears when the programme starts and is replaced by the remaining programme time.
- After the **"Start/Pause"** button has been pressed, the number of hours preselected can be reduced by pressing again the "Start delay" button.

To cancel the "Start delay"

..before you press the "Start/Pause" button:

- Turn the programme selector to another position or press the **"Reset/Drain"** button.

..after having pressed the "Start/Pause" button:

- Press the **"Reset/Drain"** button for at least 3 second. The start delay indicator light goes off.

PROGRAMME START

Open the tap and press the **"Start/Pause"** button. The indication lamp next to the **"Start/Pause"** button lights up. The display shows the remaining programme time. Due to variations in load and temperature of inlet water, the remaining time is newly calculated in certain programme phases. If this is the case, **an animation appears on the time display.**

"LID OPEN" INDICATION

Before starting and after end of a programme, the lamp lights to show the the lid can be opened. As long as a wash programme is running, the lid remains locked and must on no account be forced open. In case you have an urgent need to open it during a running programme, refer to "Cancel a running programme before the end".

CHILD LOCK BUTTONS =O3 sec

You can lock the buttons of the control panel against improper use (e.g. by children).

- Press both of the child lock buttons simultaneously and hold them for at least 3 seconds. The key symbol on the display lights up.
- To unlock the buttons again: proceed in the same way.

FAILURE INDICATIONS

In case of any failures or irregularities, consult the "Troubleshooting Guide" in your Instructions for Use.

"Water tap closed" -

No or not sufficient inlet water.

"Service" -

Failure or malfunction of an electrical component.

"Clean pump" -

Waste water is not pumped out.

Spin speed on display blinks: unbalance during spinning

PROGRAMME END

- The "Lid open" indication lights up and the display shows "End". After about a quarter of an hour, the washing machine will switch off completely to save energy.
 1. Turn the programme selector to the "O" position.
 2. Close the water tap.
 3. Open lid and drum and unload the machine.
 4. Leave the lid open for some time to allow the interior of the machine to dry.

DETERGENT OVERDOSAGE INDICATION

The symbol will light up at the end of the programme if you used too much detergent. use less detergent next time. If the symbol lights up and the display shows "Fod", too much foam interrupted the wash process; refer to the "Troubleshooting Guide" in your Instructions for use.

CHANGE PROGRAMME AND/OR OPTIONS AFTER PROGRAMME START

1. Press the **"Start/Pause"** button to pause the programme. The light blinks.
2. Select the new programme, temperature, any options and another spin speed if you want.
3. Press the **"Start/Pause"** button again. The new programme continues at the same position where the previous programme was interrupted. Do not add detergent for this programme.

CANCEL A RUNNING PROGRAMME BEFORE THE END

The **"Reset/Drain"** button cancels a programme before the end.

- Press the **"Reset/Drain"** button for at least 3 seconds. The water is drained out; it may last a while until you can open the lid.

Full manual, including troubleshooting, available here:

https://listopad.koleje.cuni.cz/dokumenty/manuals/Whirlpool_TDLR_65231_en.pdf

